

HOW TO READ DIGITAL WATER METER

USAGE READING

IF THERE'S INSUFFICIENT LIGHT, SHINE FLASH LIGHT AT ROUND SENSOR. THE DISPLAY WILL SWITCH BETWEEN A NINE DIGIT USAGE READING AND A THREE DIGIT RATE READING.

METER SIZE

WATER USAGE IS MEASURED IN CUBIC FEET OF WATER. YOUR BILLING IS BASED ON 100 CUBIC FEET (OR 1 CCF). LOOK FOR THE DECIMAL. THIS METER READS 1083 CUBIC FEET OR 10.83 CCF.

METER REGISTER MOUNTED TO TOP OF METER AND CONNECTED TO LID-MOUNT TRANSMITTER. PLEASE BE CAREFUL NOT TO DAMAGE ANY OF THE COMPONENTS WHEN ACCESSING THE METER.

LOOK FOR THE DECIMAL

RATE READING

RATE READING

RATE READING SHOWS THE CURRENT WATER FLOW THROUGH THE METER. RATE READING CAN HELP DETECT LEAKS. WHEN ALL YOUR WATER IS OFF, THE READING SHOULD DISPLAY 0.00; OTHERWISE YOU HAVE A LEAK.

